


DLA-12-IS

Connection to bluelog Neo

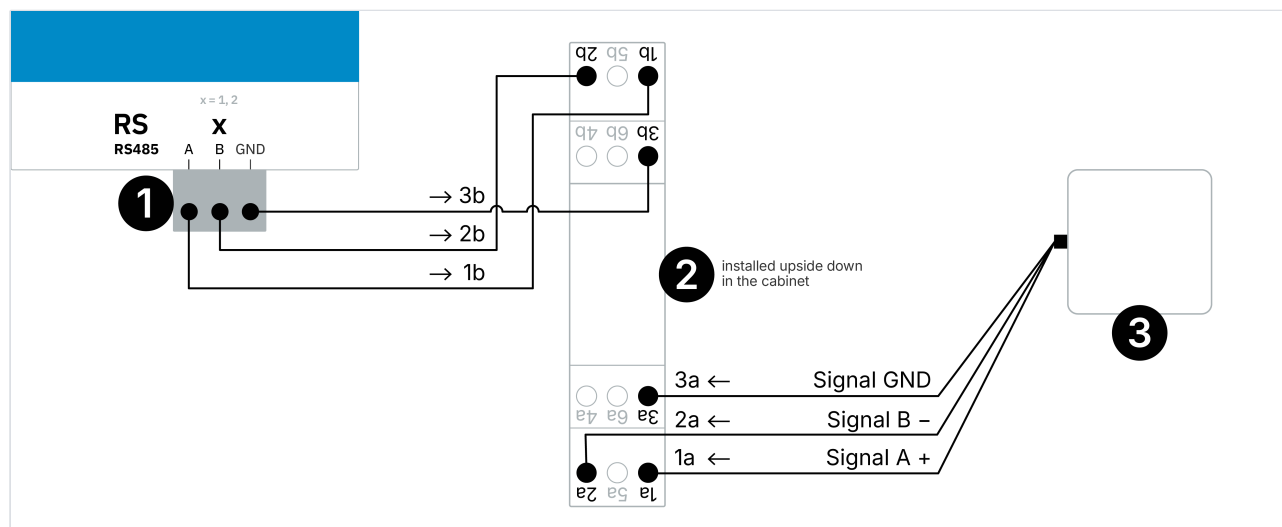

Description	
1	Data logger terminal, RS485
2	DLA-12-IS overvoltage protection (OVP)
Note In all mc Cabinets, the OVP is installed upside down.	
3	Sensor using RS485

Connection

Sensor	→ DL-12-IS in	→ DL-12-IS out	→ bluelog Neo
Signal GND	3a	3b	RS485-GND
Signal B -	2a	2b	RS485-B
Signal A +	1a	1b	RS485-A

Item numbers

Sensor	Item nos.
DLA-12-IS	201.165