


DLAH-48D3

Connection to bluelog Neo

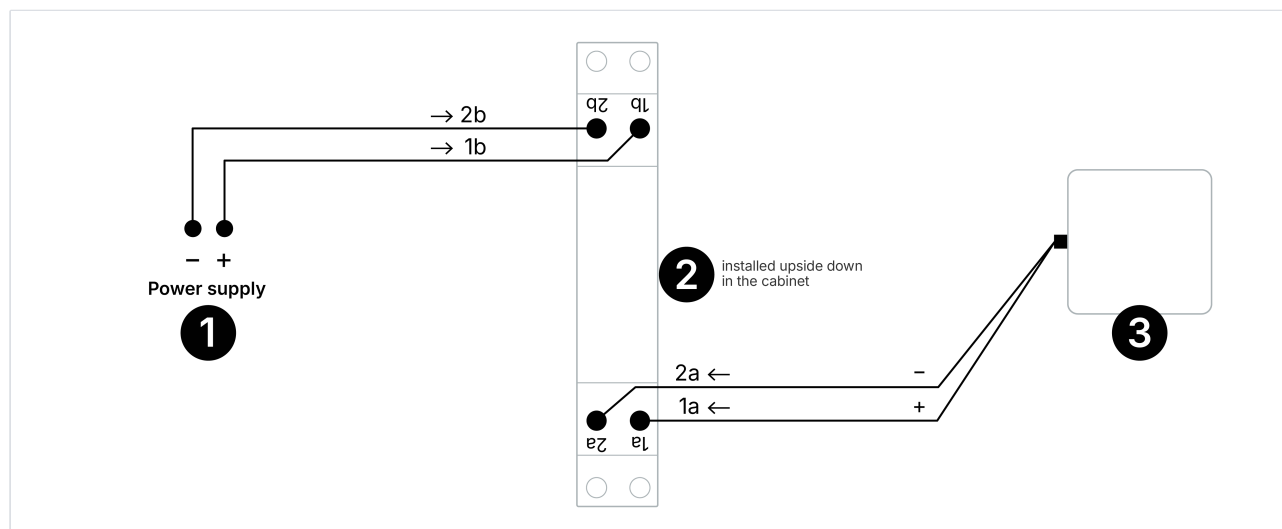

DLAH-48D3: Sensor and power supply connection

Description	
1	Power supply
2	DLAH-48D3 overvoltage protection (OVP)
Note In all mc Cabinets, the OVP is installed upside down.	
3	Sensor

Connection

Sensor	→ DLAH-48D3 in	→ DLAH-48D3 out	→ Power supply
+	1a	1b	+
-	2a	2b	-

Item numbers

Sensor	Item nos.
DLAH-48D3	201.171